
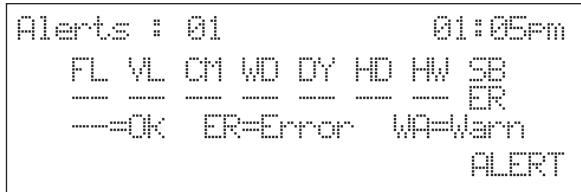


WeatherTRAK® OptiFlow® XR QUICK REFERENCE CARD

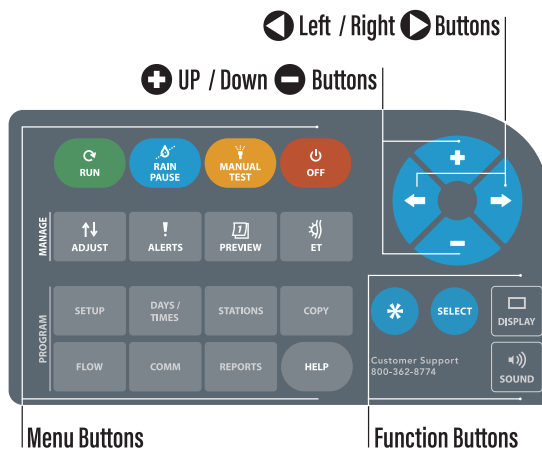

ALERT MANAGEMENT

MOBILE APP

Go to the **Alerts** tab on the Controller Settings page.

WEB

Use Alerts Page, or Multi-Controller Alert Report from weathertrak.net.

CONTROLLER

While at the controller, use the following process:

Press **Alerts** Button. The first screen is the **Alerts**

Overview showing any alert or warning that exists on your controller. Each two letter code is an Alert Category. An **ER** or **WA** appear beneath any category that has an alert present.

FL: **Flow Alerts** — Issue with flow hardware or flow feature programming. Fix the issue, then press * button to clear alert then retest

VL: **Valve Alerts** — Issue with valve electrical components or connections. Fix the issue, then press * button to clear alert then retest

CM: **Communication Alerts** — Reset GPRS Status or call Customer Service for assistance


WD: **Water Window Warning** — Calculated irrigation schedule exceeds the allowable irrigation time programmed Water Window

DY: **Water Day Warning** — Calculated irrigation schedule exceeds number of allowable Water Days programmed in Water Day Mode

HD: **Station High Depletion** — Reset Station Depletion from Manage Page of weathertrak.net or from Help menu — "Help : 12 — Current Depletion"

HW: **Hardware Alert** — Issue with controller hardware. Call Customer Service for assistance

SB: **Subscription Alert** — Call Customer Service to update data service plan

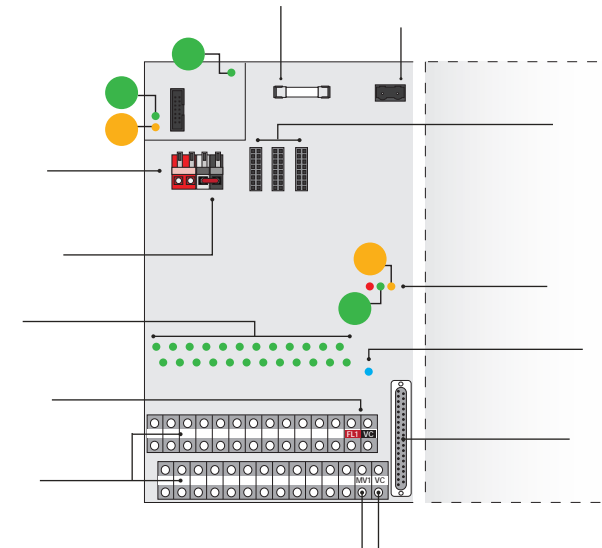

24V	30V	3.6V	3V	5V	key	Action
						Check Controller power supply to controller
●						Call Customer Service - C Board or Adapter issue
●	●					Disconnect/Reconnect ribbon cable between panel and board
●	●	●				Disconnect/Reconnect ribbon cable between panel and board
●	●	●	●			Call Customer Service - Adapter Power Supply Issue
●	●	●	●	●		Disconnect/Reconnect Station Expansion Key
●	●	●	●	●	●	Not a power structure issue

TROUBLESHOOTING

If you suspect that there is an issue with your WeatherTRAK Controller hardware, we have easy to use LED diagnostic lights on the controller chassis.

Remove the controller panel from its mounted to position to completely reveal the controller chassis.

Use the chassis diagram above to identify each of the six LED Diagnostic lights on the chassis and check to see if each is illuminated. Then, compare result to the diagnostic table and take appropriate action.

Contact Customer Support with any questions: 800.362.8774 or support@hydropoint.com.

BASIC TASKS

ACTIVATE

Access this controller from WeatherTRAK.net or WeatherTRAK Mobile

- Call Customer Support at: 800.362.8774
- Fill out the activation form at: hydropoint.com/activate

UNLOCK CONTROLLER

Use "Unlock" feature on WeatherTRAK Mobile or Press RUN button from controller.

- Use ▶ button to go to unlock screen
- Use ⊕ or ⊖ button to enter code from WeatherTRAK.net, or WeatherTRAK Mobile

SET CONTROLLER MODE

Controller On/Off, Shutdown, or Winterized

- Use "Controller Mode" Feature on WeatherTRAK Mobile

SITE CHECK

Manual Operation / Wet Check

- Use "Manual" Feature on WeatherTRAK Mobile

ADJUST

Landscape too wet or too dry

- Use "% Adjust" Feature on WeatherTRAK Mobile

